

Installation manual seals compressor A/C Thermo King X430



This shaft seal uses a carbon ring in the bellows assembly, and a silicon carbide stationary ring in the seal plate. These are the same proven materials that are used in Carrier compressors today.

CAUTION: It is critical to protect the polished surfaces of the new seal from dirt and damage. Precautions should be taken not to touch these surfaces with anything but a clean, soft cloth, or the proper installation tool. Any dirt, scratches or debris on the surfaces can cause a leak after assembly.

Instructions.

1. Remove seal plate from compressor and scrape off old gasket from both surfaces.
2. Remove old seal and mating ring, being careful not to scratch the shaft.
Note: If shaft is rusty or dirty, use scotch bright or crocus cloth to clean the shaft before assembling the new seal. Avoid making flat spots or reducing the shaft diameter.
3. Install a new oil seal into the seal plate.
4. Lubricate the outer diameter of the stationary seal O-ring with clean, compatible compressor oil and install in seal plate.
Note: Mating ring materials is very brittle. Do not bump against shaft or any other hard surface. Avoid touching seal surfaces.
5. Press stationary seal firmly into the front seal plate using an installation tool to protect the seal surface. The tapered side should be facing into the plate. If tool is not available, use the enclosed pad to protect the surface of the ring during installation.
6. Apply clean, compatible compressor oil to the shaft and inside O-ring of the bellows assy. Being careful not to touch the seal face, slide the bellows assy all the way onto shaft, aligning the tabs on the seal with the flars on the crankshaft.
Note: Make sure seal is pushed on all the way.
7. Apply clean, compatible refrigerant oil to the mating ring and bellows seal surfaces prior to assembly.
8. Install the front seal plate with a new gasket and torque to the OEM's latest specifications. Be careful not to bump the mating ring during installation of the seal plate.

Date: 15.10.2014

Page 1 / 2


Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holiče, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košíře, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

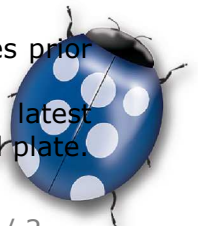

9. Run the compressor for a while and check for leaks. If seal is leaking, run the compressor for a few more minutes and check again. Seal make take a few minutes to seat.

PROTECT SEAL SURFACE FROM DIRT AND DAMAGE

Bellows Assy



Mating Ring



O-ring



Date: 15.10.2014

Page 2 / 2

Molpir s.r.o. sídlo: SNP 129, 919 04 Smolenice; prevádzka: Hrachová 30, 821 05 Bratislava, Slovenská republika, Tel.: 00421 2 4319 1219, Fax: 00421 2 4319 1220, e-mail: obchod@molpir.com, www.molpir.com, www.shop.molpir.com

IČO: 31431372, IČpD: SK 2020391560, Tatra banka Bratislava, č. ú.: 2628020575/1100, register: OS Trnava, odd: Sro, vlož.: 1045/T

MOLPIR GROUP CZ a.s., Technologická 838/14, 779 00 Olomouc, Holice, Česká republika, Tel.: 00420 585 315 017, Fax: 00420 585 315 021, e-mail: molpir_o@molpir.cz, www.molpir.cz

MOLPIR GROUP CZ a.s., Business centrum Klamovka, Plzeňská 155/113, 150 00 Praha 5 – Košiče, Tel.: 00420 724 606 000, e-mail: jsvoboda@molpir.cz, www.molpir.cz

IČO: 25828843, DIČ: CZ25828843, ČSOB Olomouc, č. ú.: 377913723/0300, Registrace: KOS, OR Ostrava, oddíl B, vložka č. 2094

