


**Monitor 10,1" motorized roof mount; small
base; HDMI input; 12/24 V**

Ord. code: MM10107H



Remote control:

❶	P	ON / OFF
❷	MENU	ENTER (select)
❸	UP / DOWN	menu select / adjust
❹	NUMBER	disabled
❺	M	disabled
❻	DIM	disabled
❼	L	angle adjust "minus"
❽	H	angle adjust "plus"
❾	AV	switch video mode
❿	AUTO	menu ON / OFF

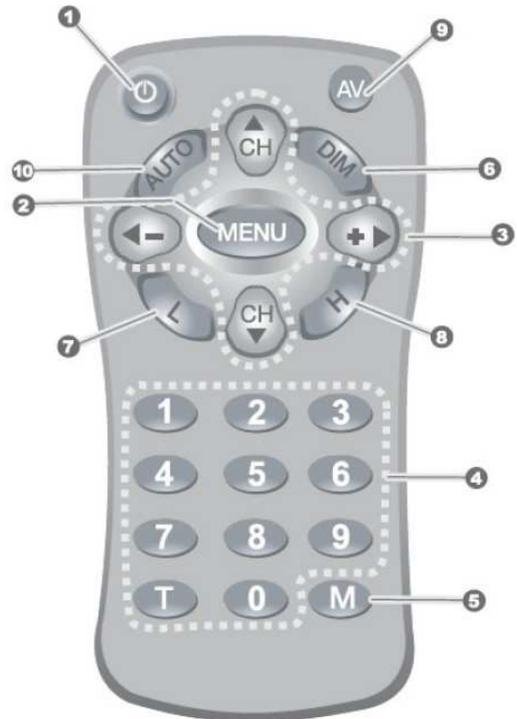

Quick start (Power Trigger Mode)

1. User connects all cables in the following line: RED: +ACC (12~30V); BLACK: GND
2. ACC is linked to POWER TRIGGER and turns ON the monitor.
3. In the option MENU / FUNCTION / TRIGGER MODE you can choose the POWER mode function.
4. If the Yellow cable ACC is disconnected and TRIGGER MODE is in POWER, the monitor will turn OFF.

Quick start (Video Trigger Mode)

1. User connects all cables in the following line: RED: +ACC (12~30V); BLACK: GND
2. Monitor turns ON automatically if a VIDEO signal is detected.
3. In the option MENU / FUNCTION / TRIGGER MODE you can choose the VIDEO mode function.
4. In there is no VIDEO INPUT, the monitor will turn OFF automatically.

Picture Mode:

Use to choose the display mode.

Color Temperature:

Use to choose the color tone.

Aspect:


Use to control the screen size.

Noise Reduction:

Use to adjust the strength of noise reduction.

Screen:

Use to adjust VGA screen.

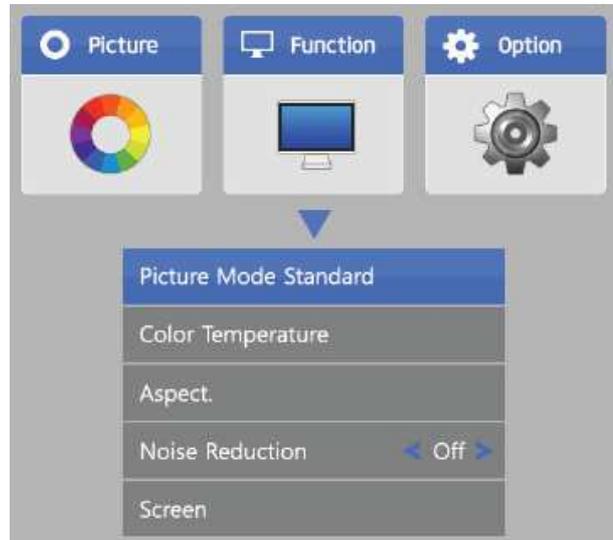

Input:


Use to choose the video source.

Trigger:

Use to choose Trigger mode (power / video).

Opening Zone:

Use to choose opening angle.

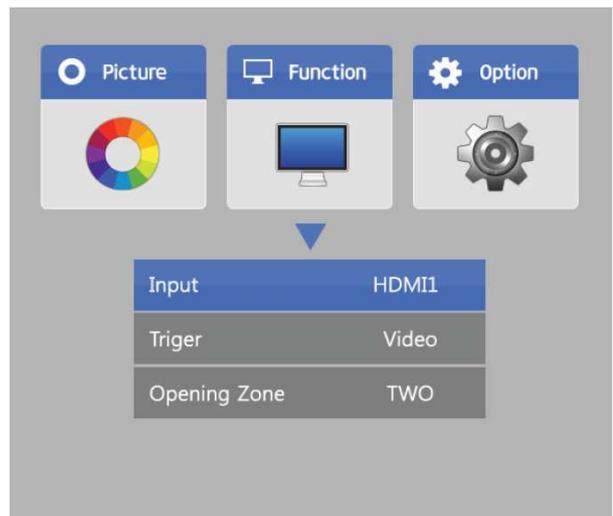

Restore Factory:

Use to initialize system.

Blending:

Use to adjust the transparency of menu.

OsdDuration:

Use to adjust menu display time.

Software Update (USB):

USB to upgrade system.

